

**Making Everything Easier!™**

# **Nikon® D7200™**

FOR  
**DUMMIES®**  
A Wiley Brand

## **Learn to:**

- Navigate your camera's buttons, dials, and settings
- Apply pro tricks to manipulate exposure, color, and focus
- Take advantage of built-in Wi-Fi and other updated features

**IN FULL COLOR!**

**Julie Adair King**





**Nikon® D7200™**

FOR  
**DUMMIES®**  
A Wiley Brand

**by Julie Adair King**

FOR  
**DUMMIES®**  
A Wiley Brand

**Nikon® D7200™ For Dummies®**

Published by: **John Wiley & Sons, Inc.**, 111 River Street, Hoboken, NJ 07030-5774, [www.wiley.com](http://www.wiley.com)

Copyright © 2015 by John Wiley & Sons, Inc., Hoboken, New Jersey

Published simultaneously in Canada

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, scanning or otherwise, except as permitted under Sections 107 or 108 of the 1976 United States Copyright Act, without the prior written permission of the Publisher. Requests to the Publisher for permission should be addressed to the Permissions Department, John Wiley & Sons, Inc., 111 River Street, Hoboken, NJ 07030, (201) 748-6011, fax (201) 748-6008, or online at <http://www.wiley.com/go/permissions>.

**Trademarks:** Wiley, For Dummies, the Dummies Man logo, Dummies.com, Making Everything Easier, and related trade dress are trademarks or registered trademarks of John Wiley & Sons, Inc. and may not be used without written permission. Nikon and D7200 are trademarks or registered trademarks of Nikon Corporation. All other trademarks are the property of their respective owners. John Wiley & Sons, Inc. is not associated with any product or vendor mentioned in this book.

**LIMIT OF LIABILITY/DISCLAIMER OF WARRANTY: THE PUBLISHER AND THE AUTHOR MAKE NO REPRESENTATIONS OR WARRANTIES WITH RESPECT TO THE ACCURACY OR COMPLETENESS OF THE CONTENTS OF THIS WORK AND SPECIFICALLY DISCLAIM ALL WARRANTIES, INCLUDING WITHOUT LIMITATION WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE. NO WARRANTY MAY BE CREATED OR EXTENDED BY SALES OR PROMOTIONAL MATERIALS. THE ADVICE AND STRATEGIES CONTAINED HEREIN MAY NOT BE SUITABLE FOR EVERY SITUATION. THIS WORK IS SOLD WITH THE UNDERSTANDING THAT THE PUBLISHER IS NOT ENGAGED IN RENDERING LEGAL, ACCOUNTING, OR OTHER PROFESSIONAL SERVICES. IF PROFESSIONAL ASSISTANCE IS REQUIRED, THE SERVICES OF A COMPETENT PROFESSIONAL PERSON SHOULD BE SOUGHT. NEITHER THE PUBLISHER NOR THE AUTHOR SHALL BE LIABLE FOR DAMAGES ARISING HEREFROM. THE FACT THAT AN ORGANIZATION OR WEBSITE IS REFERRED TO IN THIS WORK AS A CITATION AND/OR A POTENTIAL SOURCE OF FURTHER INFORMATION DOES NOT MEAN THAT THE AUTHOR OR THE PUBLISHER ENDORSES THE INFORMATION THE ORGANIZATION OR WEBSITE MAY PROVIDE OR RECOMMENDATIONS IT MAY MAKE. FURTHER, READERS SHOULD BE AWARE THAT INTERNET WEBSITES LISTED IN THIS WORK MAY HAVE CHANGED OR DISAPPEARED BETWEEN WHEN THIS WORK WAS WRITTEN AND WHEN IT IS READ.**

For general information on our other products and services, please contact our Customer Care Department within the U.S. at 877-762-2974, outside the U.S. at 317-572-3993, or fax 317-572-4002. For technical support, please visit [www.wiley.com/techsupport](http://www.wiley.com/techsupport).

Wiley publishes in a variety of print and electronic formats and by print-on-demand. Some material included with standard print versions of this book may not be included in e-books or in print-on-demand. If this book refers to media such as a CD or DVD that is not included in the version you purchased, you may download this material at <http://booksupport.wiley.com>. For more information about Wiley products, visit [www.wiley.com](http://www.wiley.com).

Library of Congress Control Number: 2015943335

ISBN 978-1-119-13415-2 (pbk); ISBN 978-1-119-13417-6 (ebk); ISBN 978-1-119-13416-9 (ebk)

Manufactured in the United States of America

10 9 8 7 6 5 4 3 2 1

# Table of Contents

## *Introduction* ..... 1

A Quick Look at What's Ahead .....	1
Icons and Other Stuff to Note .....	3
Beyond the Book .....	4
Practice, Be Patient, and Have Fun!.....	4

## *Part I: Fast Track to Super Snaps*..... 5

### **Chapter 1: First Steps, First Shots** . . . . . 7

Preparing the Camera .....	7
Navigating Menus .....	15
Decoding the Displays .....	19
Exploring More External Controls.....	23
Back-of-the-body controls.....	23
Topside controls.....	27
Left-front features .....	29
Front-right controls .....	30
Hidden connections.....	31
Familiarizing Yourself with the Lens.....	32
Working with Memory Cards .....	36
Taking advantage of the two-card system.....	36
Buying and maintaining memory cards .....	38
Taking a Few Final Setup Steps .....	39
Cruising the Setup menu.....	40
Exploring Custom Setting menu options .....	42
Restoring default settings.....	43
Shooting in Auto and Auto Flash Off Modes .....	44
Viewfinder photography in the Auto modes .....	44
Live View photography in Auto mode.....	47

### **Chapter 2: Reviewing Five Essential Picture-Taking Options** . . . . . 51

Choosing an Exposure Mode .....	52
Fully automatic exposure modes.....	52
Semi-automatic modes (P, S, and A).....	55
Manual exposure mode (M) .....	56
U1 and U2.....	56
Setting the Shutter-Release Mode .....	56
Single Frame and Quiet modes.....	58
Continuous (burst mode) shooting.....	58
Self-timer shooting.....	60
Mirror lockup (MUP).....	61

Off-the-dial shutter release features .....	62
Selecting Image Size and Image Quality .....	66
Considering Image Size (resolution) .....	66
Understanding Image Quality options (JPEG or Raw/NEF) .....	70
Adjusting the Image Size and Image Quality settings .....	75
Reducing the Image Area (DX versus 1.3x Crop) .....	78

### **Chapter 3: Adding Flash . . . . . 81**

Understanding Flash Limitations .....	82
Turning the Built-In Flash On and Off .....	83
Choosing a Flash Mode .....	84
Investigating Flash modes .....	84
Changing the Flash mode .....	88
Adjusting Flash Strength .....	91
Applying Flash Compensation .....	91
Switching to manual flash-power control .....	93
Enabling High-Speed Flash (Auto FP) .....	94
Using Flash Value Lock (FV Lock) .....	96
Exploring Additional Flash Options .....	97

## **Part II: Beyond the Basics . . . . . 99**

### **Chapter 4: Taking Charge of Exposure . . . . . 101**

Meeting the Exposure Trio: Aperture, Shutter Speed, and ISO .....	102
Aperture affects depth of field .....	104
Shutter speed affects motion blur .....	105
ISO affects image noise .....	106
Doing the exposure balancing act .....	108
Stepping Up to Advanced Exposure Modes (P, S, A, and M) .....	109
Reading the Exposure Meter .....	111
Choosing an Exposure Metering Mode .....	115
Setting Aperture, Shutter Speed, and ISO .....	118
Adjusting aperture and shutter speed .....	118
Controlling ISO .....	121
Solving Exposure Problems .....	125
Applying Exposure Compensation .....	126
Expanding tonal range .....	129
Eliminating vignetting .....	137
Using autoexposure lock .....	139
Taking Advantage of Automatic Bracketing .....	140



<b>Chapter 5: Controlling Focus and Depth of Field</b> .....	<b>145</b>
Setting the Basic Focusing Method (Auto or Manual).....	145
Exploring Standard Focusing Options (Viewfinder Photography).....	147
Setting the Focus mode (AF lock or continuous AF).....	147
Choosing an AF-area mode: One focus point or many? .....	149
Autofocusing for still subjects: AF-S + Single Point .....	153
Focusing on moving subjects: AF-C + Dynamic Area.....	155
Focusing manually .....	157
Mastering Live View Focusing .....	159
Choosing a Live View Focus mode .....	161
Selecting the AF-area mode .....	161
Stepping through the Live View autofocus process .....	164
Manual focusing during Live View and movie shooting .....	166
Manipulating Depth of Field .....	166
<b>Chapter 6: Mastering Color Controls</b> .....	<b>171</b>
Understanding White Balance .....	171
Changing the White Balance setting.....	173
Fine-tuning white balance.....	177
Creating Custom White Balance Presets .....	180
Setting white balance with direct measurement .....	180
Matching white balance to an existing photo .....	182
Selecting the preset you want to use .....	183
Editing presets .....	183
Bracketing White Balance.....	185
Taking a Quick Look at Picture Controls.....	188
<b>Chapter 7: Putting It All Together</b> .....	<b>193</b>
Recapping Basic Picture Settings .....	193
Shooting Still Portraits.....	194
Capturing Action.....	200
Capturing Scenic Vistas .....	203
Capturing Dynamic Close-Ups .....	206
<b>Chapter 8: Shooting, Viewing, and Trimming Movies</b> .....	<b>209</b>
Shooting Movies Using Default Settings .....	210
Adjusting Basic Video Settings .....	215
Controlling Audio .....	218
Manipulating Movie Exposure .....	222
Exploring Other Recording Options.....	225
Screening Your Movies .....	227

Trimming Movies .....	229
Saving a Movie Frame As a Still Image .....	231

## *Part III: After the Shot*..... 233

### **Chapter 9: Playback Mode: Viewing Your Photos** ..... 235

Picture Playback 101 .....	235
Choosing Which Images to View .....	237
Adjusting Playback Timing.....	239
Enabling Automatic Picture Rotation .....	240
Shifting from Single-Image to Thumbnails Display .....	241
Displaying Photos in Calendar View .....	242
Magnifying Photos During Playback .....	244
Viewing Picture Data .....	245
Enabling and changing playback display modes .....	246
File Information mode .....	248
Highlights display mode .....	250
RGB Histogram mode .....	252
Shooting Data display mode.....	254
Overview Data mode .....	255

### **Chapter 10: Working with Camera Files** ..... 257

Protecting Photos .....	258
Hiding Photos During Playback .....	259
Deleting Files .....	261
Deleting files one at a time.....	261
Deleting all files .....	261
Deleting a batch of selected files .....	262
Taking a Look at Nikon's Free Photo Software .....	263
Downloading Pictures to Your Computer .....	265
Processing Raw (NEF) Files .....	269
Processing Raw images in the camera.....	270
Processing Raw files in Capture NX-D.....	273
Making Copies for Online Sharing .....	275
Copying Files from One Card to Another .....	278
Taking Advantage of Wi-Fi Transfer .....	280
Connecting the camera to your device.....	281
Connecting via NFC (Android Only).....	284
Viewing photos on the smart device.....	284
Selecting photos for transfer.....	284

<i>Part IV: The Part of Tens</i> .....	<b>287</b>
<b>Chapter 11: Ten More Ways to Customize Your Camera</b> .....	<b>289</b>
Creating Custom Exposure Modes .....	289
Creating Your Own Menu .....	291
Adding Hidden Comments and Copyright Notices .....	293
Customizing Filenames .....	294
Customizing Folder Names.....	295
Changing the Purpose of the OK Button .....	297
Customizing the Command Dials.....	298
Assigning New Tasks to a Few Buttons .....	300
Customizing buttons for still photography .....	300
Customizing buttons for movie recording.....	303
Modifying the Role of the Shutter Button.....	303
Adjusting Automatic Shutdown Timing.....	304
<b>Chapter 12: Ten Features to Explore on a Rainy Day</b> .....	<b>305</b>
Investigating the Retouch Menu .....	305
Straightening Crooked and Distorted Photos .....	308
Manipulating Exposure and Color .....	310
Cropping Your Photo .....	312
Three Ways to Play with Special Effects.....	314
Applying special effects via the Retouch menu .....	314
Shooting in Effects mode .....	317
Two roads to a multi-image exposure.....	321
Using a Smart Device as a Wireless Shutter Release .....	322
Connecting Your Camera to an HDTV .....	324
Creating a Digital Slide Show .....	325
<i>Index</i> .....	<b>327</b>



# Introduction

---

**N**ikon. The name has been associated with top-flight photography equipment for generations. And the introduction of the D7200 has only enriched Nikon's reputation, offering all the control that a diehard photography enthusiast could want while providing easy-to-use, point-and-shoot features for the beginner.

In fact, the D7200 offers so *many* features that sorting them all out can be more than a little confusing, especially if you're new to digital photography, SLR photography, or both. For starters, you may not even be sure what SLR means or how it affects your picture-taking, let alone have a clue about all the other techie terms you encounter in your camera manual — *resolution*, *aperture*, *white balance*, and so on. If you're like many people, you may be so overwhelmed that you haven't yet ventured beyond Auto-everything mode, which is a shame, sort of like treating yourself to a luxury sports car and then never driving faster than 30 mph.

Therein lies the point of *Nikon D7200 For Dummies*. Through this book, you can discover not just what each bell and whistle on your camera does but also when, where, why, and how to put it to best use. Unlike many photography books, this one doesn't require any previous knowledge of photography or digital imaging to make sense of things, either. In classic *For Dummies* style, everything is explained in easy-to-understand language, with lots of illustrations to clear up any confusion.

In short, what you have in your hands is the paperback version of an in-depth photography workshop tailored specifically to your Nikon picture-taking powerhouse.

## *A Quick Look at What's Ahead*

This book is organized into four parts, each devoted to a different aspect of using your camera. Although chapters flow in a sequence that's designed to take you from absolute beginner to experienced user, I've also tried to make each chapter as self-standing as possible so that you can explore the topics that interest you in any order you please.

Here's a brief preview of what you can find in each part of the book:

- ✔ **Part I: Fast Track to Super Snaps:** Part I contains three chapters to help you get up and running. Chapter 1 guides you through initial camera setup, shows you how to adjust camera settings, and walks you through the process of taking your first pictures using Auto exposure mode. (Yes, I dissed Auto mode in the first part of this introduction, but with the tips provided in Chapter 1, you can take darned good pictures in Auto mode until you're ready to move on to more advanced options.) Chapter 2 introduces you to other exposure modes and also explains basic picture options such as Release mode, Image Size (resolution), Image Quality (JPEG or Raw), and Image Area (DX or 1.3x). Chapter 3 advances your skills another level by showing you how to use the built-in flash and how to modify flash lighting to get professional-looking results.
- ✔ **Part II: Beyond the Basics:** Chapters in this part help you unleash the full creative power of your camera by detailing advanced picture-taking features. Chapter 4 covers the critical topic of exposure; Chapter 5 explains how to manipulate focus and depth of field; and Chapter 6 discusses color controls. Chapter 7 summarizes techniques explained in earlier chapters, providing a quick-reference guide to settings and strategies that work well for portraits, action shots, landscape scenes, and close-ups. Chapter 8 shifts gears, moving from still photography to HD movie recording with your D7200.
- ✔ **Part III: After the Shot:** This part offers two chapters, both dedicated to tasks you do after you press the shutter button. Chapter 9 explains picture playback, providing details on such tricks as magnifying the onscreen image, changing the display to reveal shooting data, and choosing which pictures you want to view. Chapter 10 topics include hiding, deleting, and protecting photos, downloading images to your computer or to a tablet or smartphone, processing Raw files, and preparing pictures for online sharing.
- ✔ **Part IV: The Part of Tens:** In famous *For Dummies* tradition, the book concludes with two top-ten lists containing additional bits of information and advice. Chapter 11 details options for customizing your camera, including changing the function of some buttons and entering a copyright notice that the camera embeds into your files. Chapter 12 covers the photo-editing tools found on the camera's Retouch menu and also shows you how to use the Effects exposure mode to add effects to movies and photos as you record them. To close out the book, I show you how to use your smartphone or tablet as a wireless shutter-release unit, connect the camera to an HDTV so that you can view your work on a large screen, and create a slide show featuring your best work.

## Icons and Other Stuff to Note

If this isn't your first *For Dummies* book, you may be familiar with the large, round icons that decorate its margins. If not, here's your very own icon-decoder ring:



The Tip icon flags information that will save you time, effort, money, or some other valuable resource, including your sanity. Tips also point out techniques that help you get the best results from specific camera features.



When you see this icon, look alive. It indicates a potential danger zone that can result in much wailing and teeth-gnashing if ignored. In other words, this is stuff that you really don't want to learn the hard way.



Lots of information in this book is of a technical nature — digital photography is a technical animal, after all. But if I present a detail that is useful mainly for impressing your technology-geek friends, I mark it with this icon.



I apply this icon either to introduce information that is especially worth storing in your brain's long-term memory or to remind you of a fact that may have been displaced from that memory by another pressing fact.

Additionally, I need to point out these details:

- ✓ **Other margin art:** Replicas of some of your camera's buttons and onscreen symbols also appear in the margins of some paragraphs. I include these to provide a reminder of the appearance of the button or feature being discussed.
- ✓ **Camera menu selections:** Many camera functions require you to work your way through a series of menu screens. For example, to access the option that enables you to use your camera flash to trigger remote flash units, you have to display the Custom Setting menu, choose the Bracketing/Flash submenu, and then choose the option named Flash Cntrl for Built-In Flash. To conserve space, I sometimes present these menu sequences like so: Choose Custom Setting > Bracketing/Flash > Flash Cntrl for Built-in Flash.
- ✓ **Software menu commands:** In sections that cover software, a series of words connected by an arrow also indicates options that you choose from menus. For example, if a step tells you to "Choose File⇨Convert Files," click the File menu (at the top of the program window) to unfurl it and then click the Convert Files command on the menu.

## Beyond the Book

If you have Internet access, you can find a bit of extra content online, including this book's Cheat Sheet.

- ✓ The Cheat Sheet contains a quick-reference guide to critical camera functions. Log on, print it out, and tuck it in your camera bag for times when you don't want to carry this book with you. (As another option, you can also purchase this book in digital form so that you can access it from whatever device you use to read e-books.)

[www.dummies.com/cheatsheet/nikond7200](http://www.dummies.com/cheatsheet/nikond7200)

- ✓ In addition, a few articles offer additional advice about your camera and photography in general. For example, you can find an article about customizing Picture Control settings, which affect picture color, contrast, and sharpness.

[www.dummies.com/extras/nikon](http://www.dummies.com/extras/nikon)

## Practice, Be Patient, and Have Fun!

To wrap up this preamble, I want to stress that if you initially think that digital photography is too confusing or too technical for you, you're in very good company. *Everyone* finds this stuff mind-boggling at first. So take it slowly, experimenting with just one or two settings or techniques at first. Then, every time you go on a photo outing, make it a point to add one or two more shooting skills to your repertoire.

I know that it's hard to believe when you're just starting out, but it really won't be long before everything starts to come together. With some time, patience, and practice, you'll soon wield your camera like a pro, dialing in the necessary settings to capture your creative vision almost instinctively.

So without further ado, I invite you to grab your camera, a cup of whatever it is you prefer to sip while you read, and start exploring the rest of this book. Your D7200 is the perfect partner for your photographic journey, and I thank you for allowing me, through this book, to serve as your tour guide.

## Part I

# Fast Track to Super Snaps

getting started  
with your

**Nikon**

**D7200**

**D7200**



Visit [www.dummies.com](http://www.dummies.com) for more great *For Dummies* content online.



## *In this part . . .*

- ✔ Familiarize yourself with the basics of using your camera, from attaching lenses to navigating menus.
- ✔ Find step-by-step instructions for point-and-shoot photography in Auto mode.
- ✔ Try out Live View shooting and customize the Live View display.
- ✔ Find out how to select the shutter-release mode, exposure mode, Image Size (picture resolution), and Image Quality (file type, JPEG or Raw).
- ✔ Discover options available for flash photography in different exposure modes.

# First Steps, First Shots

## *In This Chapter*

- ▶ Preparing the camera for its first outing
- ▶ Getting acquainted with basic camera features
- ▶ Viewing and adjusting camera settings
- ▶ Setting a few basic preferences
- ▶ Taking a picture in Auto and Auto Flash Off modes

**S**hooting for the first time with a camera as sophisticated as the Nikon D7200 can produce a blend of excitement and anxiety. On one hand, you can't wait to start using your new equipment, but on the other, you're a little intimidated by all its buttons, dials, and menu options.

Well, fear not: This chapter provides the information you need to start getting comfortable with your D7200. The first section walks you through initial camera setup. Following that, I explain how to view and adjust picture settings and offer my take on some basic setup options. At the end of the chapter, I walk you step-by-step through taking your first pictures using Auto mode, which offers point-and-shoot simplicity until you're ready to step up to more advanced options.

## *Preparing the Camera*

Before you can use your D7200, you need to install the battery, attach a lens, and insert at least one memory card. (Your camera can use two cards at a time, but you only need one to begin taking pictures or recording movies.) A few preliminary notes:

- ✓ **Battery:** Use *only* the MH-25 charger that came with your camera to charge the battery. When the light on the charger stops blinking, the battery is fully charged. See the list at the end of this section to find out how to monitor the current battery charge.



- ✔ **Lens:** You can mount a wide range of lenses on your D7200, but some lenses aren't compatible with all camera features. Your camera manual lists all the lens types that can be mounted on the camera and explains what features are supported with each type. For maximum compatibility, look for Type D or G AF Nikkor, AF-S Nikkor, or AF-I Nikkor.
- ✔ **Memory card(s):** Like all digital cameras, your D7200 stores picture and movie files on memory cards. It has two card slots, both of which accept only SD (Secure Digital) cards. Most SD cards sold today carry the designation SDHC (for *High Capacity*) or SDXC (for *eXtended Capacity*), depending on how many gigabytes (GB) of data they hold. SDHC cards hold from 4GB to 32GB of data; the SDXC moniker indicates a capacity greater than 32GB.

With a charged battery, lens, and memory card(s) at hand, take these steps to get the camera ready to go:

1. **Turn the camera off.**
2. **Install the battery into the compartment on the bottom of the camera.**
3. **Attach a lens.**

First, remove the caps that cover the front of the camera and the back of the lens. Then align the *mounting index* (white dot) on the lens with the one on the camera body, as shown in Figure 1-1. After placing the lens on the camera mount, rotate the lens toward the shutter-button side of the camera. You should feel a solid click as the lens locks into place.

4. **Insert a memory card (or two).**

Open the card door on the right side of the camera to reveal the two memory card slots, labeled in Figure 1-2. If you're using a single card, install it into Slot 1. Orient the card with the label facing the back of the camera, as shown in the figure, and push it gently into the slot.

After you close the card door, the memory-card access light, labeled in the figure, illuminates briefly as the camera checks out the card. If the card



**Figure 1-1:** Align the white dot on the lens with the one on the camera body.

is damaged, full, or can't be used for some other reason, you see an error message in the Control panel (the LCD panel on top of the camera). You need to solve this issue before going forward; try a different card or visit the section "Working with Memory Cards," later in this chapter, for trouble-shooting tips.

5. **Turn the camera on.**
6. **Set the language, time zone, and date.**

When you power up the camera for the first time, a screen appears on the monitor asking you to select your language, time zone, date, and time. To adjust these settings, use the Multi Selector and OK button, both labeled in Figure 1-2. Press the edge of the Multi Selector up, down, right, or left to highlight a setting and then press OK to activate the option. Again, press the edges of the Multi Selector to adjust the active option, and then press the OK button to lock in your choice. (See the next section for more details about using camera menus.)

You don't need to take this step every time you use the camera; an internal battery separate from the main battery keeps the clock ticking for about three months. If you see a blinking clock symbol on the monitor, the clock battery is depleted. Simply charging the main camera battery and then putting that battery back in the camera restarts the clock, but you may need to reset the camera time and date.

7. **Adjust the viewfinder to your eyesight.**

This step is critical; if you don't set the viewfinder to your eyesight, subjects that appear out of focus in the viewfinder might actually be in focus, and vice versa. If you wear glasses while shooting, adjust the viewfinder with your glasses on — and don't forget to reset the viewfinder focus if you take off your glasses or your prescription changes.



**Figure 1-2:** You can install one or two SD memory cards.



You control viewfinder focus through the dial labeled in Figure 1-3. (In official lingo, it's called the *diopter adjustment dial*.) After taking off the front lens cap, follow these steps:

1. Look through the viewfinder and press the shutter button halfway.

In dim lighting, the flash may pop up. Ignore it for now and concentrate on the row of data that appears at the bottom of the viewfinder screen.

2. Rotate the viewfinder dial until that data appears sharpest.

The markings in the center of the viewfinder, which relate to auto-focusing, also become more or less sharp. Ignore the scene you see through the lens; that won't change because you're not actually focusing the camera.

3. When you finish, press down on the flash unit to close it if necessary.

## 8. Set the camera to normal (viewfinder) mode or Live View mode.

*Live View* is the feature that enables you to compose photos using the monitor, as you do with most point-and-shoot cameras. To record movies, you must use this option; you can't use the viewfinder to frame movie shots.

To shift to Live View photography, rotate the Live View switch to the still-camera icon, as shown in Figure 1-4; to set the camera to movie mode, set the switch to the movie-camera icon. Then press the center button (marked LV). The viewfinder goes dark, and the live preview appears on the monitor.

To exit Live View mode, press the LV button again. The Live View display turns off, and the viewfinder is once again available.



In addition to these initial setup steps, perform the following two preflight checks before each shoot:

- ✓ **Check the amount of free space on your memory card(s).** Where you find this information varies depending on whether you're using the viewfinder, shooting stills in Live View mode, or recording movies, as follows:

Rotate dial to adjust viewfinder



**Figure 1-3:** Rotate this dial to set the viewfinder focus for your eyesight.




**Figure 1-4:** Press the LV button to toggle Live View on and off.

- Viewfinder photography:** A number indicating how many photos will fit in the available memory-card space appears in the Control panel on top of the camera, as well as in the Information display and viewfinder. Figure 1-5 shows you where to find the information in the Control panel; Figure 1-6 provides a guide to the Information display and viewfinder.


Turn the Information screen on and off by pressing the Info button. To wake up the viewfinder, give the shutter button a half-press and then release it.

- Live View mode:** For still photography, refer to the Control panel or the shots-remaining value in the lower-right corner of the Live View display, as shown on the left in Figure 1-6.

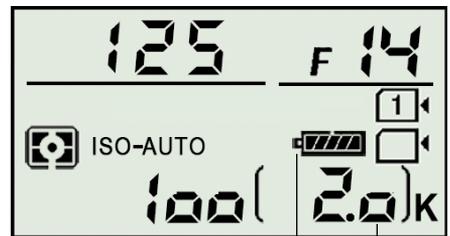

**Figure 1-5:** The Control panel displays the shots-remaining value and a symbol representing the battery status.



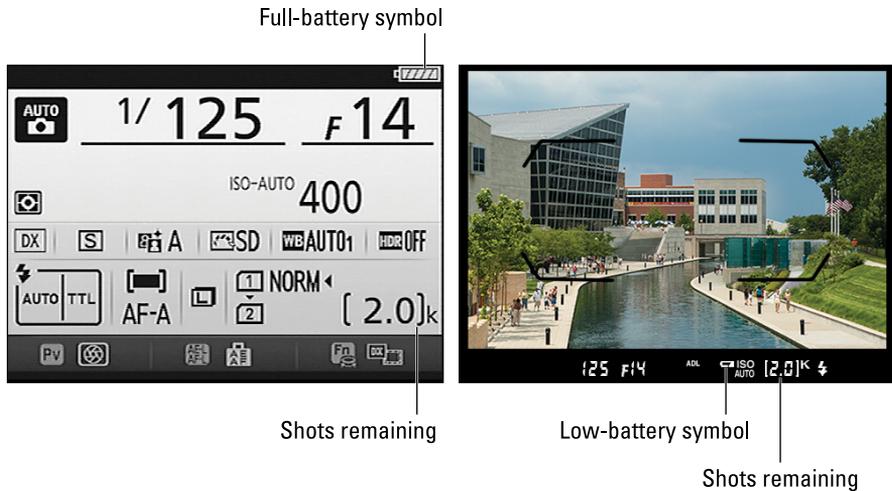

**Figure 1-6:** During viewfinder photography, you can verify the shots-remaining value and battery status in these displays.

In movie mode, you don't see a shots-remaining value in either display; instead, the maximum recording time appears on the monitor, in the area labeled on the right in Figure 1-7. Don't consider this value a full reflection of the amount of empty space on your memory card. The camera limits the maximum recording time per movie even if your card has oodles of free space remaining. After you reach the time limit for your first recording, the number resets to show you the maximum recording time for your next movie.



**Figure 1-7:** In Live View mode, the displays offer these hints about memory-card capacity.



If your displays look different from the ones in the figures, press the Info button to cycle through the various display modes available for Live View shooting. I explain more about each display later in the chapter, in the section “Decoding the Displays.”

Keep in mind that certain picture- and movie-recording settings affect the size of the image/movie file, so the number of files that can fit in the available card space changes as you adjust those settings. Chapter 2 discusses the photo-related settings (Image Area, Image Size, and Image Quality); Chapter 8 clues you in on movie-recording options.



When two cards are installed, the shots-remaining number also depends on how you configure the camera to send image data to those cards. For still photography, the camera is set by default to fill the card in Slot 1 and then switch to the second card. For movie recording, files can be stored on only one of the two cards; by default, the card in Slot 1 gets the honors. I explain how to modify this setup in the section “Taking advantage of the two-card system,” later in this chapter.

One final note: If the shots-remaining number is greater than 999, the initial K appears next to the value to indicate that the first number represents the picture count in thousands. (K being a universally accepted symbol indicating 1,000 units.) The number is rounded down to the nearest hundred. So if the number of shots remaining is, say, 2,004, the value reads as 2.0K, as shown in the figures here.

✓ **Checking battery status:** Also confirm the battery status before every outing with your camera. You can check the battery level as follows:

- *Viewfinder mode:* Both the Control panel and Information screen display a battery-status symbol; look for it in the areas labeled in Figure 1-5 and on the left in Figure 1-6. When the battery is fully charged, the symbol looks as shown in the figure. As the battery loses power, the bars in the symbol disappear one by one to let you know that you need to find a battery charger or spare battery soon.

In the viewfinder, you see battery data only when you’re running low on power. In that case, an empty-battery symbol appears at the bottom of the viewfinder, as shown on the right in Figure 1-6.

- *Live View mode:* When Live View is engaged, battery info appears only in the Control panel.



For more detailed battery data, choose Battery Info from the Setup menu, as shown in Figure 1-8. (See the next section for help with using menus.) The Charge data shows you the current power remaining as a percentage value, and the No. of Shots value tells you how many times you’ve pressed and released the shutter button since the last time you charged the battery. The final readout, Battery Age, lets you know how

much more life you can expect out of the battery before it can no longer be recharged. When the display moves toward the right end of the little meter, it's time to buy a new battery. (If you attach the optional battery pack, see its manual and the camera manual to find out how to interpret the data that's reported on this menu screen.)

That's all there is to it — the camera is now ready to go. From here, my recommendation is that you keep reading this chapter to familiarize yourself with the main camera features and basic operation. But if you're anxious to take a picture right away, I won't think any less of you if you skip to the very last section of the chapter, which guides you through the process of still photography. To start shooting movies, flip to Chapter 8. Just promise that at some point, you'll read the pages in between, because they actually do contain important information.



**Figure 1-8:** The Battery Info option on the Setup menu provides details about battery life.



## What does [r 24] in the display mean?

In the viewfinder, the initial value in brackets at the right end of the display indicates the number of additional pictures that can fit on your memory card. This same value appears in the lower-right corner of the Control panel, Information display, and Live View still-photography display. (Refer to Figures 1-5 through 1-7.) When you press the shutter button halfway, the value changes to show you how many pictures can fit in the camera's *memory buffer*, which is

a temporary storage tank where the camera stores picture data until it has time to record that data to the memory card. For example, [r 24] tells you that the buffer can hold 24 pictures. This system exists so that you can take a continuous series of pictures without waiting between shots until each image is written to the card. When the buffer is full, you can't take another picture until the camera catches up with its recording work.

## Navigating Menus



One of the first skills you need to learn to take full advantage of your D7200 is how to select options from camera menus. Table 1-1 offers a brief description of what controls live on the various menus.

<b>Symbol</b>	<b>Open This Menu . . .</b>	<b>To Access These Functions</b>
	Playback	Viewing, deleting, and protecting pictures
	Photo Shooting	Basic photography settings
	Movie Shooting	Movie recording options, including settings for controlling audio and setting the frame size and frame rate
	Custom Setting	Advanced photography options and some basic camera operations
	Setup	Additional basic camera operations
	Retouch	Photo and movie editing options
	My Menu/Recent Settings	Your custom menu or the 20 most recently used menu options
		

Here's what you need to know to navigate the menu system:

- **Display the main menus:** Press the Menu button, labeled in Figure 1-9.
- **Select a menu:** If the menu you want to see isn't visible, press the Multi Selector left to highlight the strip of menu icons, labeled in Figure 1-9. Press up or down to highlight a menu icon and then press the Multi Selector right or press the OK button to exit the icon strip and activate the menu itself.
- **Adjust a menu option:** Press the Multi Selector up or down to highlight the option you want to change and then press OK to display the settings available for that option. For example, if you select the Image Size option from the Photo Shooting menu, as shown on the left in




**Figure 1-9:** Press the Multi Selector left to activate the menu-icon strip; press right to activate the menu itself.

Figure 1-10, you see the settings shown on the right in the figure. Press the Multi Selector up or down to highlight your choice and then press OK to return to the main menu screen.


In some cases, a right-pointing triangle appears next to an option on the settings screen. That's your cue to press the Multi Selector right to display a submenu (although in many cases, you can press OK instead).

Items that are dimmed on a menu or settings screen aren't available in the current exposure mode. For access to all settings, set the Mode dial on top of the camera to P, S, A, or M.

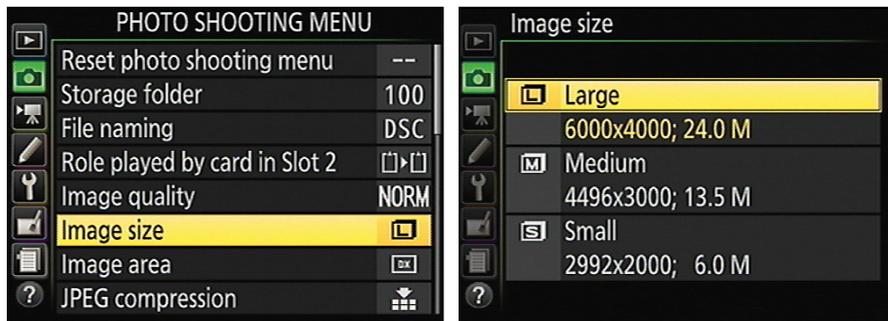

**Figure 1-10:** Use the Multi Selector to highlight a menu option (left) and then press OK to display the available settings (right).

- **Select items from the Custom Setting menu:** The Custom Setting menu, represented by the Pencil icon, contains submenus that carry the labels A through G, as shown on the left in Figure 1-11. Each submenu holds clusters of options related to a specific aspect of the camera's operation. To get to those options, use the Multi Selector to highlight the submenu and then press OK. For example, if you choose the A (Autofocus) submenu, you see the options shown on the right in Figure 1-11.

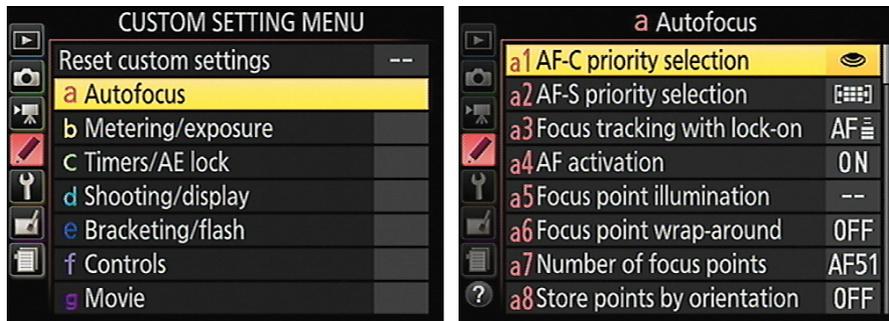

**Figure 1-11:** The Custom Setting menu contains submenus of advanced options.

In the Nikon manual, instructions reference the Custom Setting menu items by a menu letter and number. For example, “Custom Setting a1” refers to the first option on the a (Autofocus) submenu. I try to be more specific, however, so I use the actual setting names. (Really, we all have enough numbers to remember, don’t you think?)

After you jump to the first submenu, you can simply scroll up and down the list to view options from other submenus. You don’t have to keep going back to the initial menu screen and selecting a submenu.


- **Taking advantage of the My Menu and Recent Settings menus:** These two menus, both shown in Figure 1-12, share the bottom slot in the strip of menu icons. You can display only one of the two at a time, however. Each menu contains a Choose Tab option as the last item on the menu; select this option to shift between the two menus.

Here’s what the two menus offer:

- **Recent Settings:** This screen lists the 20 menu items you ordered most recently. To adjust those settings, you don’t have to wade through all the other menus to look for them — head to the Recent Settings menu instead.

To remove an item from the Recent Settings menu, use the Multi Selector to highlight the item and press the Delete button. Press Delete again to confirm your decision.



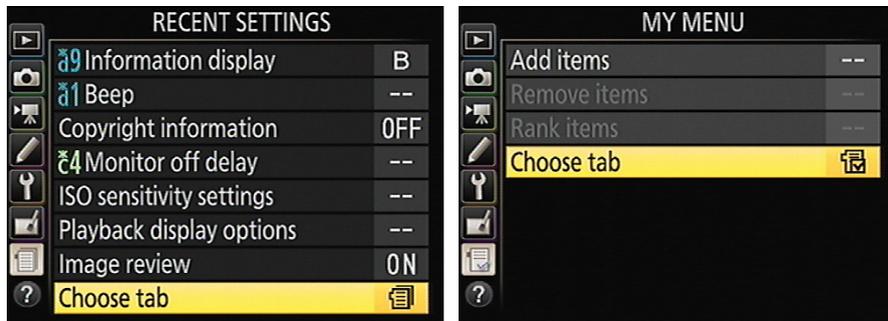

**Figure 1-12:** The Recent Settings menu offers quick access to the last 20 menu options you selected; the My Menu feature enables you to design a custom menu.



- *My Menu:* From this screen, you can create a custom menu that contains up to 20 of your favorite menu items. Chapter 11 details the steps.
- ✓ **Saving time with the *i* button menus:** In addition to the menus listed in Table 1-1, you can press the *i* button, labeled in Figure 1-13, to display a menu screen that enables you to quickly access certain shooting or playback settings.

During shooting, which options the menu contains depends on your exposure mode and whether Live View is enabled. The screen shown in Figure 1-13 appears when you shoot in one of the advanced exposure modes (P, S, A, and M). Dimmed items can't be adjusted in your current exposure mode.




Press to display *i* button menu

**Figure 1-13:** Pressing the *i* button gives you fast access to the most frequently adjusted settings.

Things work a little differently in Live View mode: For still photography, pressing the **i** button displays a column of options along the right side of the monitor, as shown on the left in Figure 1-14. When the Live View switch is set to the movie setting, options on the **i** button menu relate to movie-recording options. Either way, use the Multi Selector to highlight an option and press OK to display the available settings for that option, as shown on the right in the figure. After you make your selection, press OK to return to the menu. To exit the menu, press the **i** button or press the shutter button halfway and release it.

During playback, the **i** button menu offers items related to after-the-shot functions such as applying Retouch menu tools.

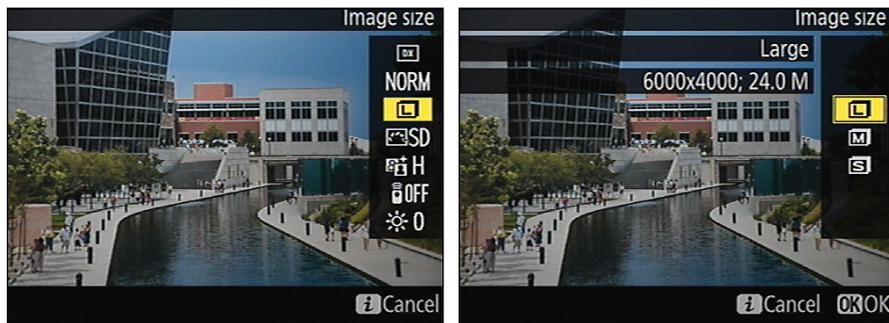

**Figure 1-14:** When Live View is enabled, the **i** button menu offers these settings during still photography.

## Decoding the Displays

In addition to menus, your D7200 offers several displays to help you keep track of the most critical picture and camera settings. The following provides some details about using and customizing the displays. Note that the data that appears in each display depends on certain camera settings, including your exposure mode. The figures in this section show the screens as they appear in Auto exposure mode. (Don't worry if you haven't a clue as to what some symbols and numbers mean; most won't make any sense until you explore later chapters.)

Which displays are available depends on whether you're shooting still photos or movies and whether Live View is enabled. Here's the scoop:

- ✓ **Control panel:** The *Control panel* is the LCD display on top of the camera; Figure 1-15 offers a look. This display is a full-time worker. Its readout appears for viewfinder photography, Live View photography, and movie recording.



If you're shooting in dim lighting and find the readout hard to see, you can illuminate the panel by rotating the On/Off switch past the On position to the light bulb marker, labeled in Figure 1-15, and then releasing the switch. The backlight turns off automatically a few seconds after you release the switch.


Alternatively, you can set the camera to light up the Control panel any time the exposure meters are activated. If you prefer that arrangement, choose Custom Setting > Shooting/Display > LCD Illumination and select On. Just keep in mind that this setting consumes more battery power than simply rotating the switch to light the display when needed.

No matter which menu option you choose, the shots-remaining value and icons representing the installed memory cards remain visible even after you turn off the camera. The display only turns off fully if you remove the camera battery. (Don't worry that the display will run down your battery; it consumes very little power.)

- ✓ **Viewfinder:** When Live View is not enabled, you can view a handful of settings in the data display at the bottom of the viewfinder, as shown on the left in Figure 1-16. (If you don't see the data strip, press the shutter button halfway and release it to bring the display to life.)



**Figure 1-15:** Rotate the On/Off switch to the light bulb position to illuminate the Control panel.

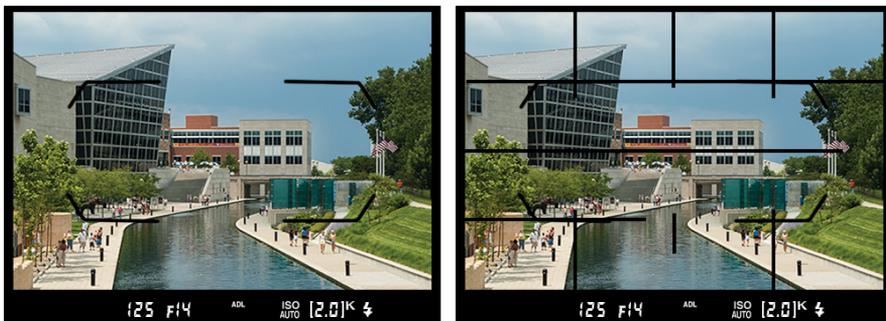

**Figure 1-16:** Picture settings also appear at the bottom of the viewfinder (left); enable the grid for help with aligning objects in the frame (right).